

Shock, Vibration & Glass Break Sensor

1. Learn Button
2. LED Indicator
3. Battery Insulator

ENGLISH

SVGS-S1 is only compatible with Q-series alarm systems

Follow instruction in this document to setup and use the accessory. For further setting and operation detail, please visit Blaupunkt website <http://www.blaupunkt.com> to download the complete manual.

Getting Started


1. Pull out the battery insulator to activate battery.
2. Refer to your Control Panel manual to put panel into learning mode.
3. Use a sharp tool to press and hold the Learn button for about 10 seconds and release when LED flashes once. Wait a few seconds.
4. If learning is successful, the LED will flash twice. Refer to panel manual to complete the learning process.

Installation and Operation

- The sensor should be installed at inside of window corner with double side adhesive tape supplied in the package.
- The sensor transmits signal whenever shock is detected.
- Refer to manual for more info on installation and detection.

Battery

1 x 3V CR2032 lithium battery
(Pre-inserted)

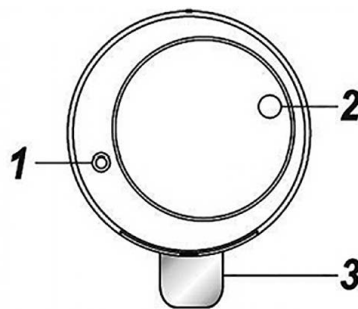

Sensore vibrazioni e rottura vetro (Italiano)

1. Pulsante apprendimento
2. Indicatore LED
3. Isolante Batteria

ITALIANO

SVGS-S1 è compatibile solo con i sistemi di allarme Q-series.

Seguire le istruzioni contenute in questo documento per impostare e utilizzare l'accessorio. Per ulteriori informazioni sulle impostazioni e il funzionamento, si prega di visitare il sito web Blaupunkt <http://www.blaupunkt.com> per scaricare il manuale completo

Operazioni preliminari

1. Estrarre l'isolante della batteria per attivare la batteria.
2. Consultare il manuale del pannello di controllo per impostare il pannello in modalità di apprendimento.
3. Utilizzare uno strumento appuntito per premere e tenere premuto il tasto Learn per circa 10 secondi e rilasciare quando il LED lampeggerà una volta e attendere qualche secondo.
4. Se l'apprendimento ha esito positivo, il LED lampeggerà due volte. Fare riferimento al manuale della centrale per completare il processo di apprendimento.

Installazione & funzionalità

- Il sensore deve essere installato all'interno in un angolo della finestra con nastro biadesivo fornito nella confezione.
- Il sensore trasmette il segnale ogni volta che viene rilevata una vibrazione.
- Fare riferimento al manuale per ulteriori informazioni sull'installazione e il rilevamento..

Batteria

1 x 3V CR2032 al litio (Pre-inserita)